

Driver download & installation

- * Apple's macOS doesn't need any driver.
- * Smartphones and portable music players don't need any driver.

For Windows users:

After connection, click the volume icon on taskbar, select "YUKI USB DAC with Amp", and the Yuki is ready for use.



For high bit/rate native PCM or DSD files playback on Windows, a driver and foobar2000 are needed.

Please go to: <u>www.auneaudio.com</u> \rightarrow English \rightarrow Service & Support \rightarrow Downloads \rightarrow Yuki and download the <u>driver</u>.

	A
Driver/Firmware	User Manual
Yuki USB Driver (Windows)	Yuki User Manual
	Yuki DSD Settings

Extract the .zip file and double click the .exe file to begin the installation.



aune USB Audio Drivers_setup_WHQL.exe



aune USB Audio Drivers	- • ×
ອບຕອ	欢迎使用 aune USB Audio Drivers 安装向导
	这个向导将指引你完成 aune USB Audio Drivers 的安 装进程。 在开始安装之前,建议先关闭其他所有应用程序。这将 允许"安装程序"更新指定的系统文件,而不需要重新 启动你的计算机。 单击[安装(I)]开始安装进程。

V

During the installation, the Yuki will be required to plug in \downarrow

	, brivers <u>E1±</u> Q*	а, Щ с IK «		
<u> </u> 近行: regsvr32	2.exe /s ~C:\Windo	ows\SysWOW64\ctasi	o. dl1~	
显 🖨 aune	USB Audio Driver	s		×
	设备连接电脑后,设	青点击确定键来安装驱	动或点击取消键退;	ж .

Connect the Yuki to the computer (If you have plugged it in earlier, please replug it.) Follow the prompts to complete the installation.



foobar2000

Install foobar2000;

Download ASIO plugin: https://www.foobar2000.org/components

Download ASIO proxy: https://sourceforge.net/projects/sacddecoder/files/foo_input_sacd/foo_input_sacd-0.5.3-ASIOProxyInstall.zip/download

Download SACD plugin (foo_input_sacd-xx.zip): http://sourceforge.net/projects/sacddecoder/files/foo_input_sacd

Double click foo_input_sacd-0.5.3-ASIOProxyInstall to install the ASIO driver

ASIO Proxy for foobar20	000 Setup: Installat ou want to install and und Click Next to continue.		e compone	× ents
Select components to install:	ASIOProxy (requi	ired)		
Space required: 175.0KB				
Cancel Nullsoft Instal	l System v2.46		Nex	t >

Double click the component files to install the plugins



Click 【Apply】, and confirm restart





foobar2000 restarts - go to $\$ File $\$ - $\$ Preferences $\$ and check if the plugins are successfully installed

?

X

Preferences: Components

Components	Installed components: Right-click a component for additional options					
> Display	Name	Version	Module			
Keyboard Shortcuts	Album List	4.7	foo_albumlist			
> Media Library	ASIO Output	2.2.1	foo_out_asio			
	CD Audio Decoder	3.0	foo_cdda			
Decoding	Converter	1.5.4	foo_converter			
	Default User Interface	1.5.4	foo_ui_std			
> Output	DSD Processor	1.3.2	foo_dsd_processor			
	Equalizer	1.2.1	foo_dsp_eq			
Tools	FFmpeg Decoders	3.4.6-0ac9	foo_input_std			
Advanced	File Operations	1.5.4	foo_fileops			
	foobar2000 core	1.5.4	Core			
	Online Tagger	0.7	foo_freedb2			
	ReplayGain Scanner	1.5.4	foo_rgscan			
	Standard DSP Array	1.5.4	foo_dsp_std			
	Standard Input Array	1.5.4	foo_input_std			
	Super Audio CD Decoder	1.5.10	foo_input_sacd			
	ZIP/GZIP/RAR Reader	1.8	foo unpack			
	Get more components			1		
	Why are some components grayed ou	<u>it?</u>	tall <u>C</u> opy report	Get update		

Go to {Preference} - {Playback} - {Output} Set {Device} to {ASIO: foo_dsd_asio}

? \times Preferences: Output Components Device ✓ Display ASIO : foo_dsd_asio ~ - Context Menu ✓ Default User Interface - Background and Notifications **Buffer length** - Colors and Fonts Playlist View Keyboard Shortcuts Media Library 1000 ms Album List Warning: setting too low buffer length may cause some visualization effects to stop working. Networking ✓ Playback **Output format** Decoding DSP Manager Output data format: Dither ✓ Output ASIO Output data format will be chosen automatically for the selected device. Shell Integration



Go to 【Output】 - 【ASIO】 - double click 【foo_dsd_asio】

Preferences: ASIO		?	×
Components Display Context Menu Context Menu Context Menu Context Menu Colors and Fonts Playlist View Keyboard Shortcuts	ASIO drivers aune USB Audio Device foo_dsd_asio PhonicUSB ASIO Driver		
Media Library Album List Album List Networking Playback Decoding DSP Manager Output ASIO Shell Integration Tools ReplayGain Scanner SACD · Tagging	Double-click an entry to activate the driver's control panel. Use 64-bit ASIO drivers Run with high process priority Custom channel mappings	Add	l New
⊢freedb Tagger > :UPnP — Advanced	This feature allows you to configure alternate channel mappings for your ASIO-en- soundcards. You may need to close and re-open the foobar2000 preferences dialog for your ne	abled	nove
	added mappings to appear as output devices in the "output" page. Reset all Reset page OK Cancel		pply

Set [ASIO Driver] to [aune UAD ASIO]

rable playback err	Olsplay Keyboard Shortcuts Media Library Modu List		aune UAD aune USB A foo_dsd_as SXW UAD A	ASIO Judio Device sio ISIO
foo_dsd_asio v0.7.1.2			×	
ASIO Driver: DSD Playback Method:	aune UAD ASIO ASIO Native		•	entry to activate the driver's control panel. ASIO drivers an process priority
DSD to DSD Method: PCM to DSD Method:	None	Fs: Fs:	DSD512 • DSD512 •	nannel mappings
DSD/PCM Transition:	· ·			
	> Browser - Controller - Server - Basic Settings		This feature	allowe way to configure alternate channel mannings for way ASTO_enabled



Go to 【Tools】 - 【SACD】

Refer to the settings below:

		The second se	
播放			
DSP 管理器	ASTO Driver Model DSD -		
▲ 输出	ASIO DIIVEI Mode.		
ASIO	DCM Valumat		
▲ 输入			
DSDIFF Decoder	PCM Samplerate: 176400 -		
<u> </u>	PCM Samplerate. 176400 +		
SACD	DSD2PCM Moder Direct (Devible Provide		
▷·标金 .http://	Direct (Double+reds	Coad Jaave	
'伏捷健 雄体 庄			
殊(P) 年 一	Preferable Area:		
	None		
网络	Catholis Teas	2	
显示		0	
组件	Edited Master Playback		
高级			

Apply/OK. Done.

* When using foobar2000 to play DSD files, there is switching noise when fast forwarding or changing songs. This is caused by the ASIO of the player software. Reducing the buffer time can significantly alleviate this phenomenon.